



the manufacturer:  
attachments not recommended by  
as described in this manual. Do not use  
3. Use this appliance only for its intended use  
could result in fire or personal injury.  
the physically challenged. Unsupervised use  
appliance is used by, on, or near children or  
2. Close supervision is necessary when this  
unattended when plugged in.  
1. This appliance should never be left  
burns, electrocution, fire, or injury to persons:  
— To reduce the risk of  
**WARNING**

4. If an appliance falls into water, unplug it  
immediately. Do not reach into the water:  
3. Do not place in, or drop into water or  
other liquid.  
2. Do not place or store appliance where it can  
fall or be pulled into a tub or sink.  
1. Always unplug appliance immediately  
after using.  
To reduce the risk of death by electric shock:  
electrically live even when the switch is off.

**DANGER** — Any appliance is  
To operate this appliance if it has a damaged  
cord or plug, if it is not working properly, or if  
it has been dropped or damaged, or dropped  
into water. Do not attempt to repair the  
appliance. Incorrect reassembly or repair could  
cause a risk of fire, electric shock, or injury to  
persons when the appliance is used. Return the  
appliance to an authorized service center for  
examination and repair:  
5. Keep the cord away from heated surfaces.  
Do not pull or twist cord. Let appliance cool  
completely before putting away. Loop cord  
loosely around appliance when storing.  
6. This appliance has a polarized plug (one blade  
is wider than the other). As a safety feature,  
this plug will fit in a polarized outlet only one  
way. If the plug does not fit fully in the outlet,  
reverse the plug. If it still does not fit, contact a  
qualified electrician. Do not attempt to defeat  
this safety feature.  
7. Never drop or insert any object into any  
opening.  
8. Do not use outdoors or operate where  
aerosol (spray) products are being used or  
where oxygen is being administered.  
9. Do not use an extension cord to operate  
appliance.  
10. Surfaces of this appliance may be hot when  
in use. Do not let heated surfaces touch  
eyes or bare skin.  
11. Do not place the steam nozzle directly on  
any surface or on the appliance power cord  
while it is hot or plugged in.  
12. Unplug this appliance before filling or  
emptying. Do not overfill.

**IMPORTANT SAFETY INSTRUCTIONS**  
When using electrical appliances, especially  
when children are present, basic safety  
precautions should always be taken, including  
the following:  
**READ ALL INSTRUCTIONS BEFORE OPERATING APPLIANCE**

13. While emitting steam, this appliance may  
cause burns if it is used too close to the skin,  
scalp or eyes, or if it is used incorrectly. To  
reduce the risk of contact with hot water  
coming from steam vents, test appliance  
before each use by holding it away from body.  
14. Do not operate steamer without properly  
filling the water container.  
15. Never yank cord to disconnect from outlet;  
instead, grasp plug and pull to disconnect.  
16. Burns could occur from touching hot parts,  
hot water, or steam. Use care when you  
turn a steam appliance upside down — there  
may be hot water in reservoir.  
17. To reduce likelihood of circuit overload, do  
not operate another high wattage appliance  
on the same circuit.  
18. When installing or removing attachment,  
please be sure the unit is off and no  
steam is being released to avoid contact  
with hot water.  
19. Use caution when installing or removing  
attachment as it may contain hot water from  
condensation. Ensure the attachment is dry  
or cooled off to avoid contact with hot water:  
This is a 120/240V dual voltage appliance and  
may be used in the United States and abroad  
without an electricity converter.  
1. An adapter plug may be necessary when  
using this appliance in some foreign countries.  
If so, plug the steamer into correct adapter  
plug for your location and plug assembly into  
electrical outlet.  
2. Unplug this appliance before filling or  
emptying. Do not overfill.

3. While emitting steam, this appliance may  
cause burns if it is used too close to the skin,  
scalp or eyes, or if it is used incorrectly. To  
reduce the risk of contact with hot water  
coming from steam vents, test appliance  
before each use by holding it away from body.  
14. Do not operate steamer without properly  
filling the water container.  
15. Never yank cord to disconnect from outlet;  
instead, grasp plug and pull to disconnect.  
16. Burns could occur from touching hot parts,  
hot water, or steam. Use care when you  
turn a steam appliance upside down — there  
may be hot water in reservoir.  
17. To reduce likelihood of circuit overload, do  
not operate another high wattage appliance  
on the same circuit.  
18. When installing or removing attachment,  
please be sure the unit is off and no  
steam is being released to avoid contact  
with hot water.  
19. Use caution when installing or removing  
attachment as it may contain hot water from  
condensation. Ensure the attachment is dry  
or cooled off to avoid contact with hot water:  
This is a 120/240V dual voltage appliance and  
may be used in the United States and abroad  
without an electricity converter.  
1. An adapter plug may be necessary when  
using this appliance in some foreign countries.  
If so, plug the steamer into correct adapter  
plug for your location and plug assembly into  
electrical outlet.  
2. Unplug this appliance before filling or  
emptying. Do not overfill.

3. While emitting steam, this appliance may  
cause burns if it is used too close to the skin,  
scalp or eyes, or if it is used incorrectly. To  
reduce the risk of contact with hot water  
coming from steam vents, test appliance  
before each use by holding it away from body.  
14. Do not operate steamer without properly  
filling the water container.  
15. Never yank cord to disconnect from outlet;  
instead, grasp plug and pull to disconnect.  
16. Burns could occur from touching hot parts,  
hot water, or steam. Use care when you  
turn a steam appliance upside down — there  
may be hot water in reservoir.  
17. To reduce likelihood of circuit overload, do  
not operate another high wattage appliance  
on the same circuit.  
18. When installing or removing attachment,  
please be sure the unit is off and no  
steam is being released to avoid contact  
with hot water.  
19. Use caution when installing or removing  
attachment as it may contain hot water from  
condensation. Ensure the attachment is dry  
or cooled off to avoid contact with hot water:  
This is a 120/240V dual voltage appliance and  
may be used in the United States and abroad  
without an electricity converter.  
1. An adapter plug may be necessary when  
using this appliance in some foreign countries.  
If so, plug the steamer into correct adapter  
plug for your location and plug assembly into  
electrical outlet.  
2. Unplug this appliance before filling or  
emptying. Do not overfill.

3. While emitting steam, this appliance may  
cause burns if it is used too close to the skin,  
scalp or eyes, or if it is used incorrectly. To  
reduce the risk of contact with hot water  
coming from steam vents, test appliance  
before each use by holding it away from body.  
14. Do not operate steamer without properly  
filling the water container.  
15. Never yank cord to disconnect from outlet;  
instead, grasp plug and pull to disconnect.  
16. Burns could occur from touching hot parts,  
hot water, or steam. Use care when you  
turn a steam appliance upside down — there  
may be hot water in reservoir.  
17. To reduce likelihood of circuit overload, do  
not operate another high wattage appliance  
on the same circuit.  
18. When installing or removing attachment,  
please be sure the unit is off and no  
steam is being released to avoid contact  
with hot water.  
19. Use caution when installing or removing  
attachment as it may contain hot water from  
condensation. Ensure the attachment is dry  
or cooled off to avoid contact with hot water:  
This is a 120/240V dual voltage appliance and  
may be used in the United States and abroad  
without an electricity converter.  
1. An adapter plug may be necessary when  
using this appliance in some foreign countries.  
If so, plug the steamer into correct adapter  
plug for your location and plug assembly into  
electrical outlet.  
2. Unplug this appliance before filling or  
emptying. Do not overfill.

3. While emitting steam, this appliance may  
cause burns if it is used too close to the skin,  
scalp or eyes, or if it is used incorrectly. To  
reduce the risk of contact with hot water  
coming from steam vents, test appliance  
before each use by holding it away from body.  
14. Do not operate steamer without properly  
filling the water container.  
15. Never yank cord to disconnect from outlet;  
instead, grasp plug and pull to disconnect.  
16. Burns could occur from touching hot parts,  
hot water, or steam. Use care when you  
turn a steam appliance upside down — there  
may be hot water in reservoir.  
17. To reduce likelihood of circuit overload, do  
not operate another high wattage appliance  
on the same circuit.  
18. When installing or removing attachment,  
please be sure the unit is off and no  
steam is being released to avoid contact  
with hot water.  
19. Use caution when installing or removing  
attachment as it may contain hot water from  
condensation. Ensure the attachment is dry  
or cooled off to avoid contact with hot water:  
This is a 120/240V dual voltage appliance and  
may be used in the United States and abroad  
without an electricity converter.  
1. An adapter plug may be necessary when  
using this appliance in some foreign countries.  
If so, plug the steamer into correct adapter  
plug for your location and plug assembly into  
electrical outlet.  
2. Unplug this appliance before filling or  
emptying. Do not overfill.

**Service Center/Service Après-Vente/  
Centro de Servicio**  
Service Department  
10 Railroad Avenue  
Beacon Falls, CT 06403

Travel Smart® is a trademark of Conair Corporation  
Customer Service (800) 326-6247

**www.conair.com**

Travel Smart®, a division of Conair Corporation  
10 Railroad Avenue, Beacon Falls, CT 06403  
©2008 Conair Corporation

Travel Smart® es una marca registrada por Conair Corporation  
Servicio post-venta (800) 326-6247

**www.conair.com**

Travel Smart®, es una división de Conair Corporation  
10 Railroad Avenue, Beacon Falls, CT 06403  
©2008 Conair Corporation

Travel Smart® est une marque déposée par Conair Corporation  
Service après-vente : 1-800-326-6247

**www.conair.com**

Travel Smart®, est une division de Conair Corporation  
10 Railroad Avenue, Beacon Falls, CT 06403  
©2008 Conair Corporation

08FRZ170

IB-8540

## SAVE THESE OPERATING INSTRUCTIONS

**NOTE:** This unit is thermostatically protected to  
shut off when water has boiled away. You should  
unplug the unit before this occurs because  
hazardous and may damage unit. Before using  
the garment steamer for the first time, it is  
recommended to operate the steamer for  
approximately 5 minutes, unplugging the unit and  
allow it to cool. Empty container and refill  
before actually using.

### HOW TO USE

1. Be sure garment steamer is unplugged.  
2. Release handle by pushing red button.  
3. While holding main body of steamer, twist  
steamer head counterclockwise and lift it  
to remove.  
4. Fill reservoir with ordinary tap water to max  
fill line. **DO NOT OVERFILL.**  
5. Replace steamer head on steamer body,  
twisting clockwise into locked position.  
6. If steam is spitting or dripping, this indicates  
that there may be too much water in the  
unit. For the best performance, we strongly  
recommend filling the reservoir with  
less water.  
7. Attach brush accessory to steamer if desired.  
(Please refer to brush attachment section)  
8. Place appliance on a flat surface in an upright  
position. Plug into electrical outlet.

## ESPAÑOL MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos,  
especialmente en la presencia de niños, debe  
tomar precauciones básicas de seguridad, entre  
las cuales las siguientes:

### LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

**PELIGRO** — Cualquier  
electrodoméstico permanece bajo tensión,  
aunque el interruptor esté apagado. Para  
reducir el riesgo de muerte o herida por  
descarga:

1. Siempre desconecte el aparato  
inmediatamente después de usarlo.
2. No coloque ni guarde el aparato donde  
pueda caer o ser empujado a una bañera  
o un lavabo.
3. No coloque el aparato ni lo deje caer al  
agua u otro líquido.
4. Si el aparato cayera al agua, desconéctelo  
inmediatamente. **No toque el agua.**

**ADVERTENCIA** — Para reducir  
el riesgo de quemaduras, electrocución,  
incendio o heridas:

**ANY IMPLIED WARRANTIES, OBLIGATIONS,  
OR LIABILITIES, INCLUDING BUT NOT  
LIMITED TO THE IMPLIED WARRANTY OF  
MERCHANTABILITY AND FITNESS FOR A  
PARTICULAR PURPOSE, SHALL BE LIMITED  
IN DURATION TO THE 12-MONTH DURATION  
OF THIS WRITTEN, LIMITED WARRANTY.**

Some states do not allow limitations on how  
long an implied warranty lasts, so the above  
limitations may not apply to you.

**IN NO EVENT SHALL CONAIR BE LIABLE  
FOR ANY SPECIAL, INCIDENTAL, OR  
CONSEQUENTIAL DAMAGES FOR BREACH OF  
THIS OR ANY OTHER WARRANTY, EXPRESS  
OR IMPLIED, WHATSOEVER.** Some states do  
not allow the exclusion or limitation of special,  
incidental, or consequential damages, so the  
above limitation may not apply to you.

This warranty gives you specific legal rights and  
you may have other rights which vary from  
state to state.

**TO MAKE CREASES OR PLEATS**  
1. Hang garment.  
2. Fold fabric where crease or pleat is desired.  
Hold fold in place while applying steam  
directly to fold.  
1. Hang the on hanger.  
2. Apply steam directly to the  
folded hanger, preferably on a padded hanger.  
3. Apply steam to garment.

**TO STEAM SHOULDERS AND SLEEVES**  
1. Hang garment, preferably on a padded hanger.  
2. Fill out shoulders or sleeves with folded towel.  
3. Apply steam to garment.

**LIMITED ONE-YEAR WARRANTY**  
Conair will repair or replace (at our option)  
your unit free of charge for 12 months from  
the date of purchase if the appliance is  
defective in workmanship or materials.  
To obtain service under this warranty, return  
the defective product to the service center  
listed below, together with your purchase  
receipt and \$5.00 for postage and handling.  
California residents need only provide proof  
of purchase and should call 1-800-3-CONAIR  
for shipping instructions. In the absence of a  
purchase receipt, the warranty period shall be  
12 months from the date of manufacture.



